

VARIABLE INTAKE-AIR SOLENOID VALVE FUNCTION [LF]

B3E011318740T01

- Switches the intake manifold vacuum passage between the intake manifold and the actuator.