


## IDLE AIR CONTROL (IAC) VALVE REMOVAL/INSTALLATION [ZJ, Z6]

B3E011320661W01

1. Remove the under cover.
2. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
3. Disconnect the negative battery cable.
4. Remove the IAC valve.

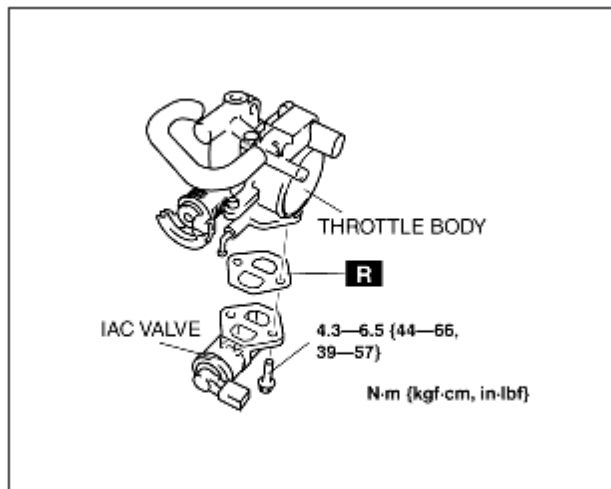

B3E0113W011

5. Install in the reverse order of removal.