


ACCELERATOR PEDAL REMOVAL/INSTALLATION [LF]

B3E011341600W02

1. Remove in the order indicated in the table.

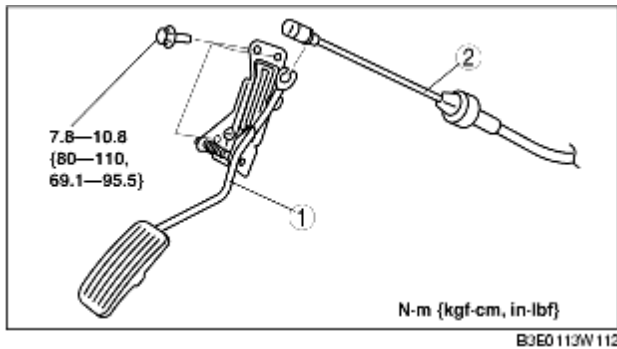

1	Accelerator pedal
2	Accelerator cable

2. Install in the reverse order of removal.
3. Adjust the accelerator cable. (See [ACCELERATOR CABLE INSPECTION/ADJUSTMENT \[LF\]](#).)