


## FUEL SYSTEM STRUCTURAL VIEW [ZJ, Z6, LF]

B3E011400114T02

### Engine Compartment Side


ZJ, Z6

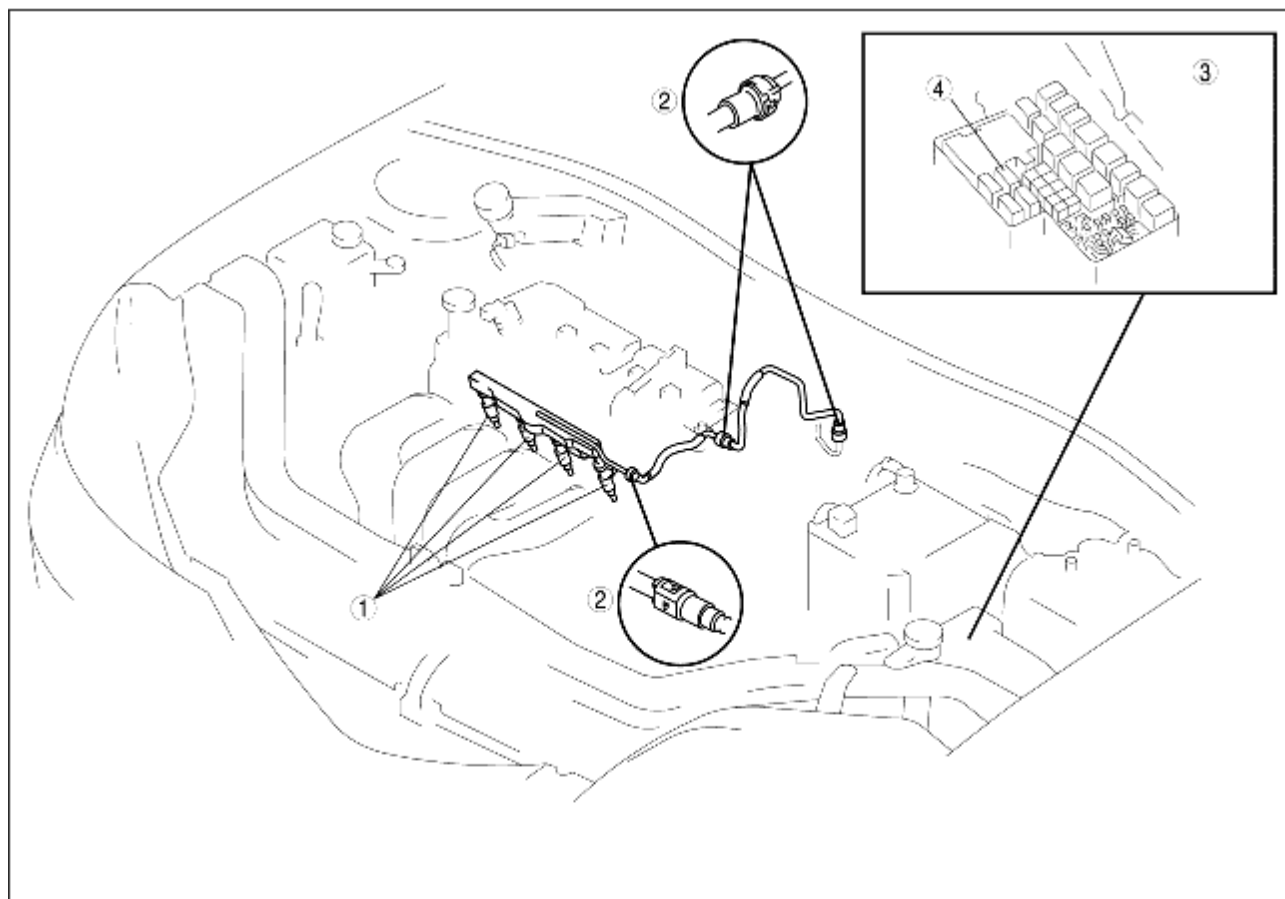

B3E0114T002

1	Fuel injector
2	Quick release connector
3	Main fuse block
4	Fuel pump relay


LF

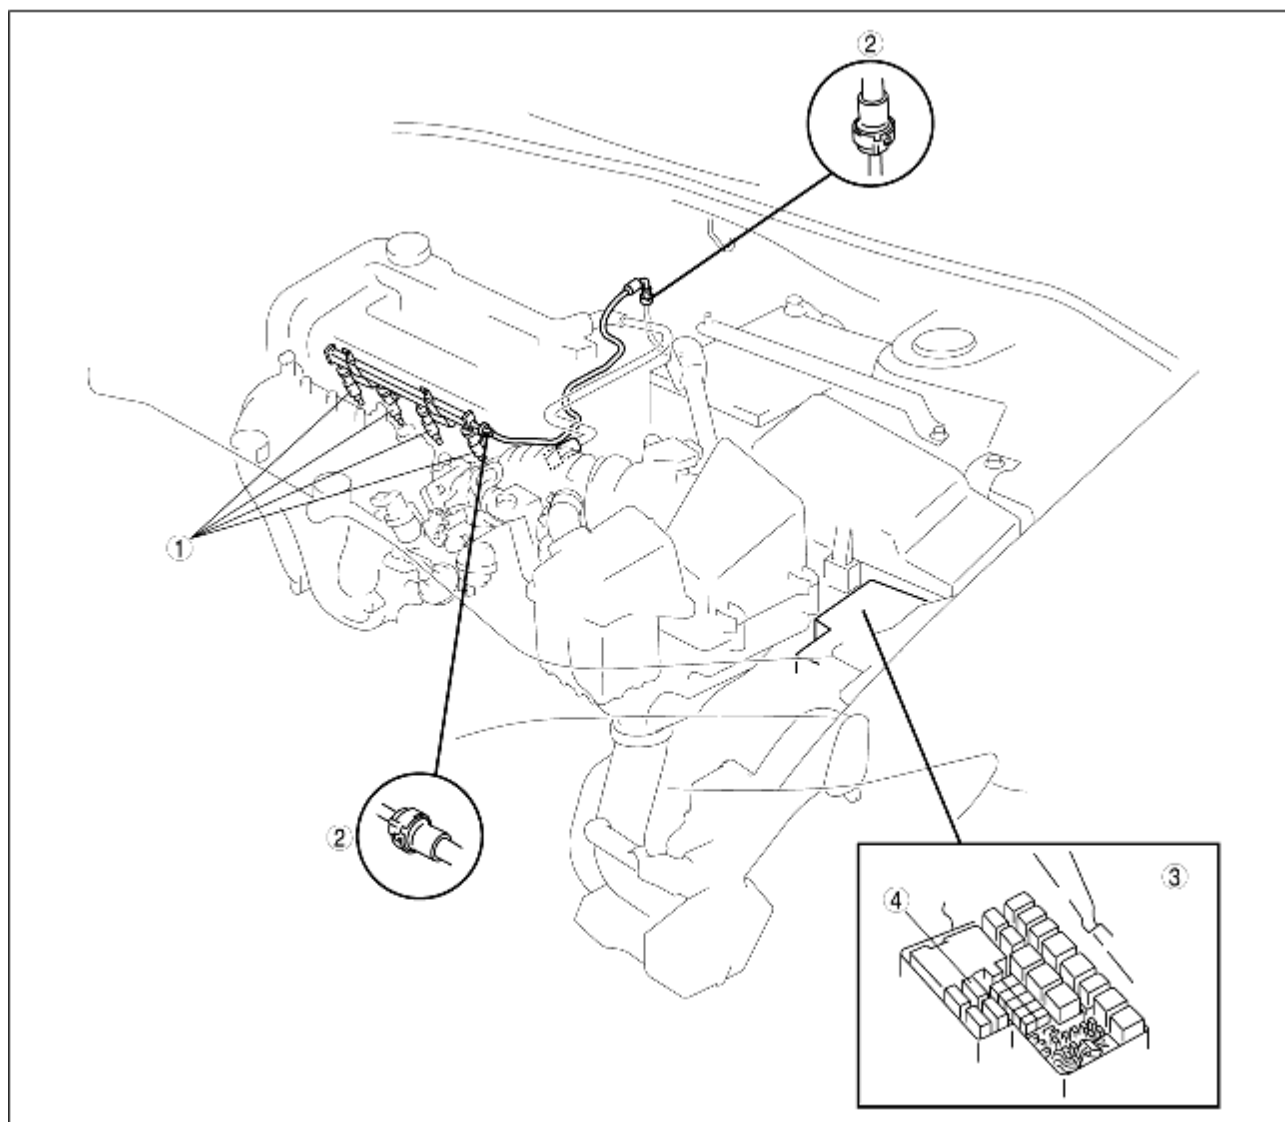

B3E01 14T001

1	Fuel injector
2	Quick release connector
3	Main fuse block
4	Fuel pump relay

## Fuel Tank Side

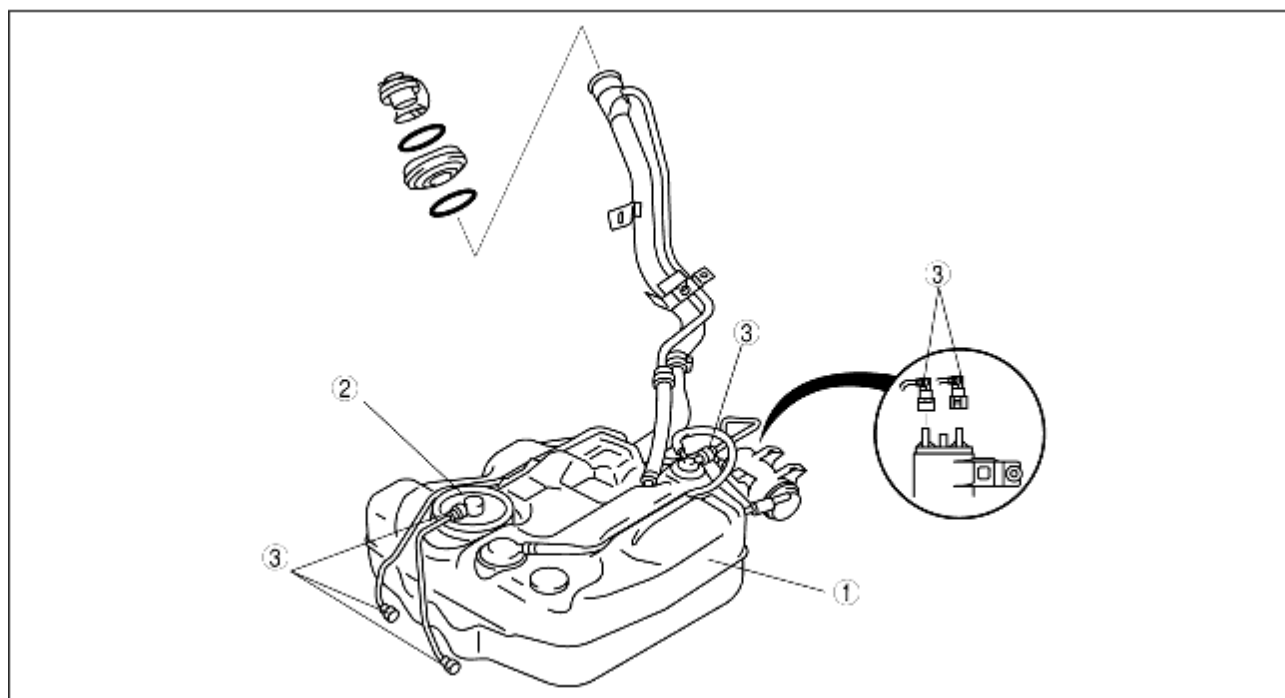

B3E0114T003

1	Fuel tank
2	Fuel pump unit
3	Quick release connector