

FUEL INJECTOR FUNCTION [ZJ, Z6, LF]

B3E011413250T01

- Injects fuel according to fuel injector control signals from the PCM.