

FUEL PUMP UNIT FUNCTION [ZJ, Z6, LF]

B3E011413350T01

- The fuel pump suctions fuel from the fuel tank and pumps it to the fuel distributor.