

## FUEL PUMP RELAY FUNCTION [ZJ, Z6, LF]

---

B3E011413350T03

- Controls the fuel pump on/off according to control signals from the PCM.