

FUEL PUMP UNIT DISASSEMBLY/ASSEMBLY [ZJ, Z6, LF]

B3E011413350W02

Note

- The fuel pump unit cannot be disassembled.