

NONRETURN VALVE FUNCTION [ZJ, Z6, LF]

B3E011442270T01

- Prevents fuel from spouting out due to evaporative gas pressure in the fuel tank when removing the fuel-filler cap.