


NONRETURN VALVE INSPECTION [ZJ, Z6, LF]

B3E011442270W01

1. Remove the fuel-filler pipe. (See [FUEL TANK REMOVAL/INSTALLATION \[ZJ, Z6, LF\]](#).)
2. Move the valve and verify that the valve opens to **90°**.

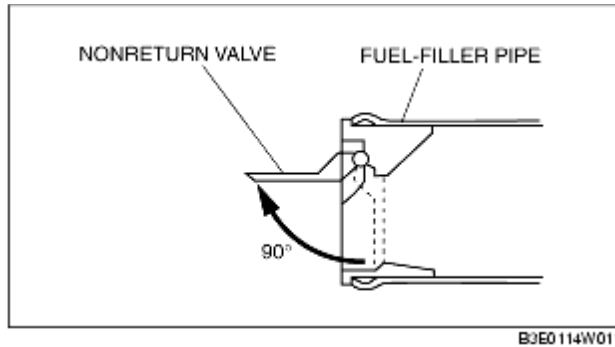

- If it does not open, replace the fuel-filler pipe.
3. Verify that the nonreturn valve returns to the normal position by spring force.
- If it does not return, replace the fuel-filler pipe.