

EGR VALVE FUNCTION [ZJ, Z6, LF]

B3E011601007T05

- Adjusts the amount of exhaust gas to be recirculated from the exhaust system to the combustion chamber based on the EGR control signal from the PCM.