


# POSITIVE CRANKCASE VENTILATION (PCV) VALVE CONSTRUCTION/OPERATION [ZJ, Z6, LF]

B3E011601007T08

- Consists of a spring and valves.
- The PCV valve ensures the passage of blowby gas by opening the valve according to the intake manifold vacuum, and adjusts the amount of gas by spring force.

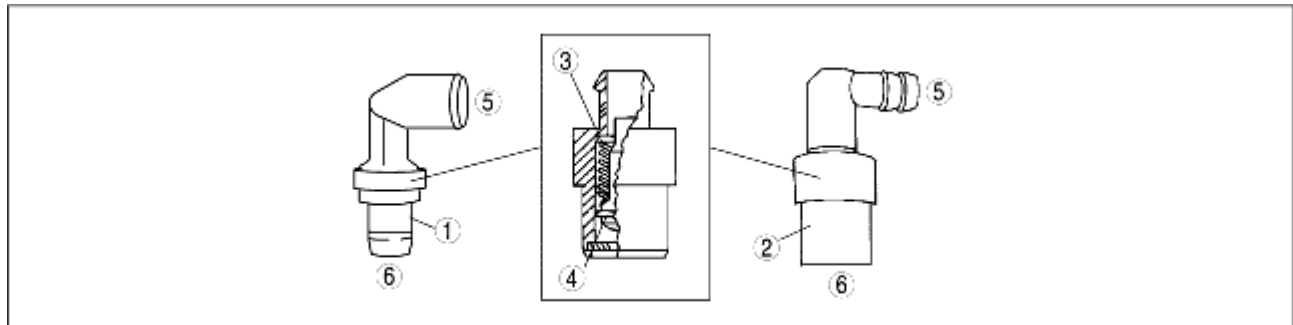

B3E01 16T011

|   |                    |
|---|--------------------|
| 1 | PCV valve (LF)     |
| 2 | PCV valve (ZJ, Z6) |
| 3 | Spring             |
| 4 | Internal valve     |
| 5 | To intake manifold |
| 6 | From oil separator |