


CHARCOAL CANISTER CONSTRUCTION/OPERATION [ZJ, Z6, LF]

B3E011613970T02

- Installed on the rear of the fuel tank.
- During purge solenoid valve operation, atmosphere enters the charcoal canister from the atmospheric orifice to entirely flood the activated charcoal and release the evaporative gas.

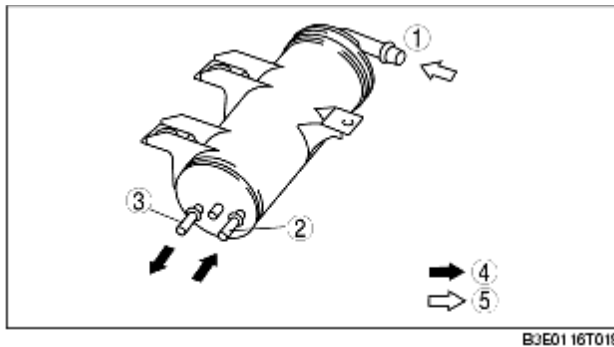

1	Atmosphere
2	Fuel tank side
3	Purge solenoid valve side
4	Flow of evaporative gas
5	Flow of atmosphere