



CHARCOAL CANISTER REMOVAL/INSTALLATION [ZJ, Z6, LF]

B3E011613970W01

1. Remove the charcoal canister protector.

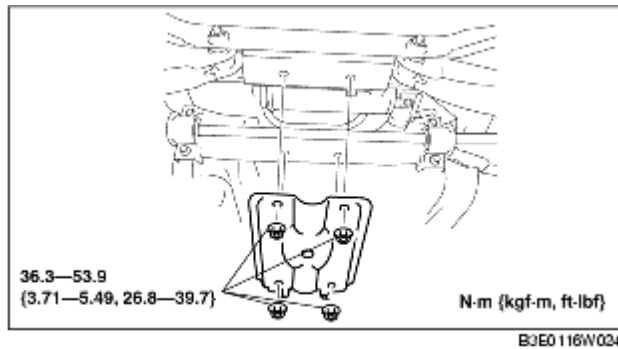

2. Remove in the order indicated in the table.

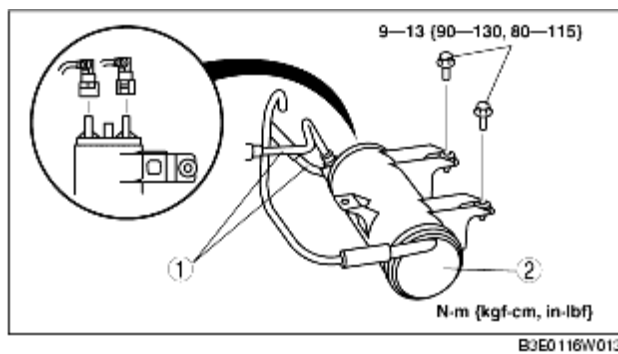

1	Evaporative hose (See QUICK RELEASE CONNECTOR REMOVAL/INSTALLATION [ZJ, Z6, LF].)
2	Charcoal canister

3. Install in the reverse order of removal.