

## PURGE SOLENOID VALVE FUNCTION [ZJ, Z6, LF]

---

B3E011618740T01

- Adjusts the amount of evaporative gas to be introduced to the intake air system.