


# PURGE SOLENOID VALVE REMOVAL/INSTALLATION [ZJ, Z6]

---

B3E011618740W02

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
2. Disconnect the negative battery cable.
3. Remove in the order indicated in the table.

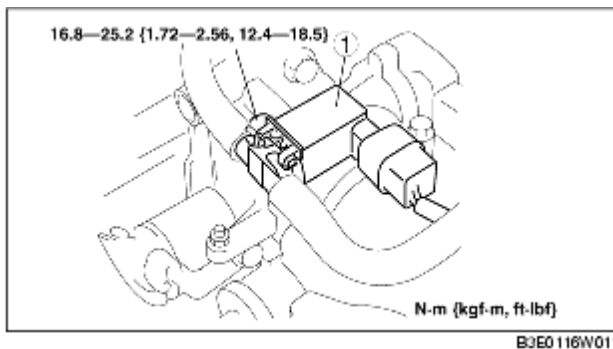

1	Purge solenoid valve
---	----------------------

4. Install in the reverse order of removal.