


## EGR VALVE REMOVAL/INSTALLATION [LF]

B3E011620300W01

1. Remove the plug hole plate.
2. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)
3. Disconnect the negative battery cable.
4. Disconnect the EGR valve connector.
5. Remove in the order indicated in the table.

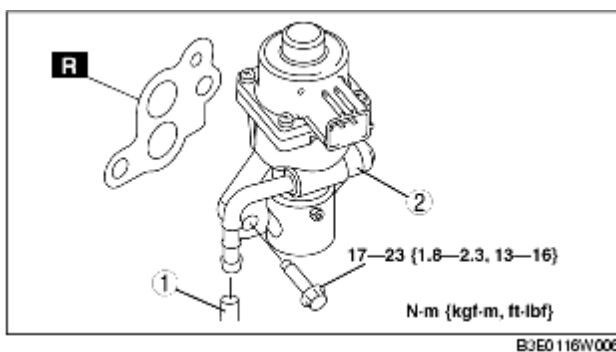

1	Water hose (See <a href="#">Water Hose Removal Note [LF]</a> .)
2	EGR valve (See <a href="#">EGR Valve Removal Note [LF]</a> .)

6. Install in the reverse order of removal.

### Water Hose Removal Note [LF]

1. Drain the engine coolant from the radiator. (See [ENGINE COOLANT REPLACEMENT](#).)

### EGR Valve Removal Note [LF]

1. Remove the air cleaner and air hose. (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[LF\]](#).)
2. Remove the radiator hose (upper). (See [RADIATOR REMOVAL/INSTALLATION](#).)