


EGR VALVE REMOVAL/INSTALLATION [ZJ, Z6]

B3E011620300W02

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
2. Disconnect the negative battery cable.
3. Disconnect the EGR valve connector.
4. Remove in the order indicated in the table.

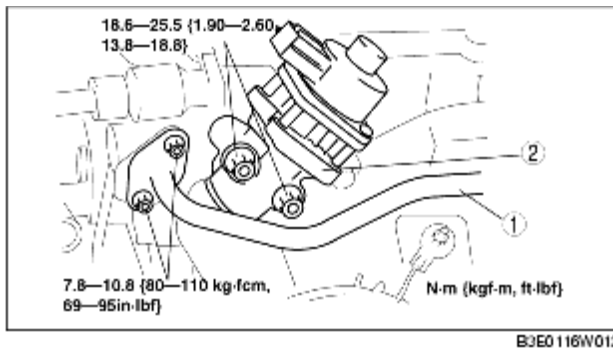

| | |
|---|--|
| 1 | EGR pipe (Exhaust manifold side) (See EXHAUST SYSTEM REMOVAL/INSTALLATION [ZJ, Z6].) |
| 2 | EGR valve |

5. Install in the reverse order of removal.