

FUEL-FILLER CAP FUNCTION [ZJ, Z6, LF]

B3E011642250T01

- If the evaporative gas passage is closed for some reason, the fuel filler cap prevents the generation of positive or negative pressure in the fuel tank, protecting it from deformation.