

ROLLOVER VALVE INSPECTION [ZJ, Z6, LF]

B3E011642720W02

Note

- The rollover valve cannot be disassembled and inspected as it is built into the fuel tank.

1. Perform the fuel tank inspection. (See [FUEL TANK INSPECTION \[ZJ, Z6, LF\]](#).)