


IGNITION SYSTEM LOCATION INDEX [LF]

B3E011801009W02

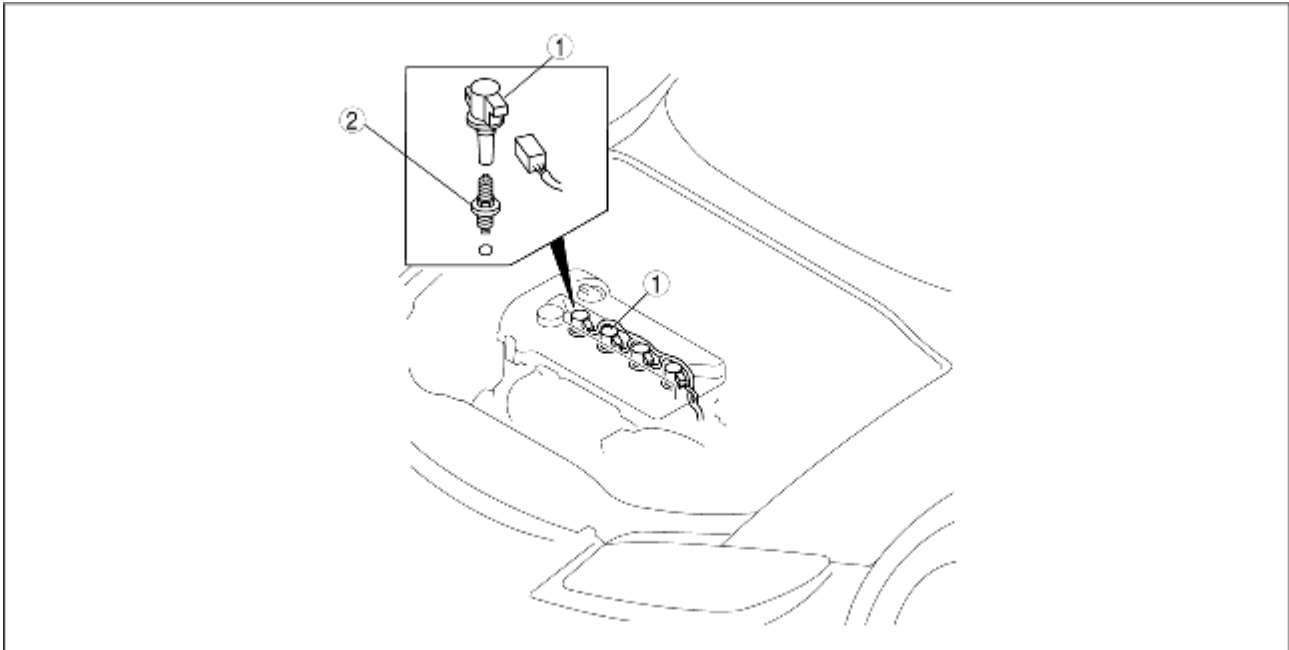

B3E01 18T003

1	Ignition coil (See IGNITION COIL REMOVAL/INSTALLATION [LF] .) (See IGNITION COIL INSPECTION [LF] .)
2	Spark plug (See SPARK PLUG REMOVAL/INSTALLATION [LF] .) (See SPARK PLUG INSPECTION .)