


IGNITION COIL REMOVAL/INSTALLATION [ZJ, Z6]

B3E011801009W03

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
2. Disconnect the negative battery cable.
3. Remove the air cleaner (L.H.D.). (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
4. Set the air cleaner cover out of the way (R.H.D.).
5. Remove the air cleaner case (R.H.D.). (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
6. Remove in the order indicated in the table.
7. Install in the reverse order of removal.

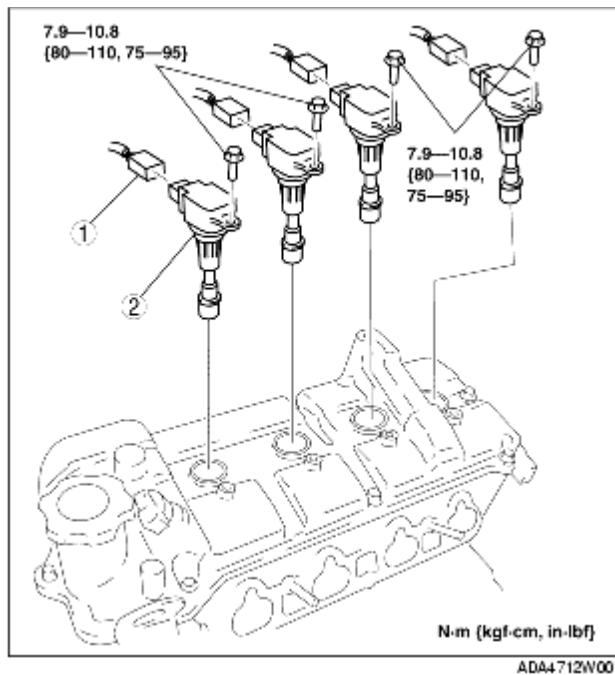

1	Connector
2	Ignition coil