


IGNITION COIL REMOVAL/INSTALLATION [LF]

B3E011801009W04

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)
2. Disconnect the negative battery cable.
3. Remove the plug hole plate.

(See [PLUG HOLE PLATE REMOVAL/INSTALLATION \[LF\]](#).)

4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.

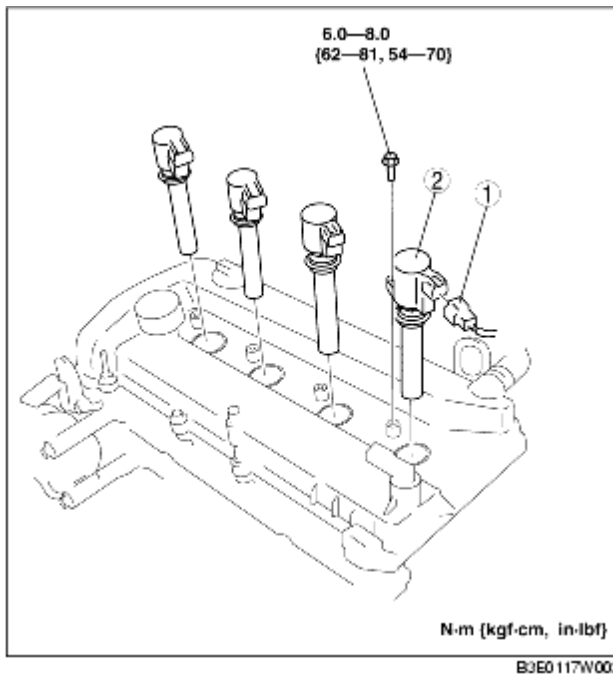

1	Connector
2	Ignition coil