

# SPARK PLUG REMOVAL/INSTALLATION [ZJ, Z6]

---

B3E011801009W07

## Caution

- If a spark plug that is not as specified is installed, sealing performance will be deteriorated. Install only the specified spark plug when replacing.

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
2. Disconnect the negative battery cable.
3. Remove the air cleaner (L.H.D.). (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
4. Set the air cleaner cover out of the way (R.H.D.).
5. Remove the air cleaner case (R.H.D.). (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
6. Remove the ignition coil. (See [IGNITION COIL REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
7. Remove the spark plugs using a plug-wrench.
8. Install in the reverse order of removal.

## Tightening torque

**1422 N·m {1.52.3 kgf·m, 1116 ft·lb}**