

# SPARK PLUG REMOVAL/INSTALLATION [LF]

---

B3E011801009W08

## Caution

- If a spark plug that is not as specified is installed, sealing performance will be deteriorated. Install only the specified spark plug when replacing.

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)
2. Disconnect the negative battery cable.
3. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/INSTALLATION \[LF\]](#).)
4. Remove the ignition coil. (See [IGNITION COIL REMOVAL/INSTALLATION \[LF\]](#).)
5. Remove the spark plugs using a plug-wrench.
6. Install in the reverse order of removal.

## Tightening torque

**10-14 N·m {1.1-1.4 kgf·m, 8-10 ft·lbf}**