


STARTING SYSTEM LOCATION INDEX [ZJ, Z6]

B3E011918400W01

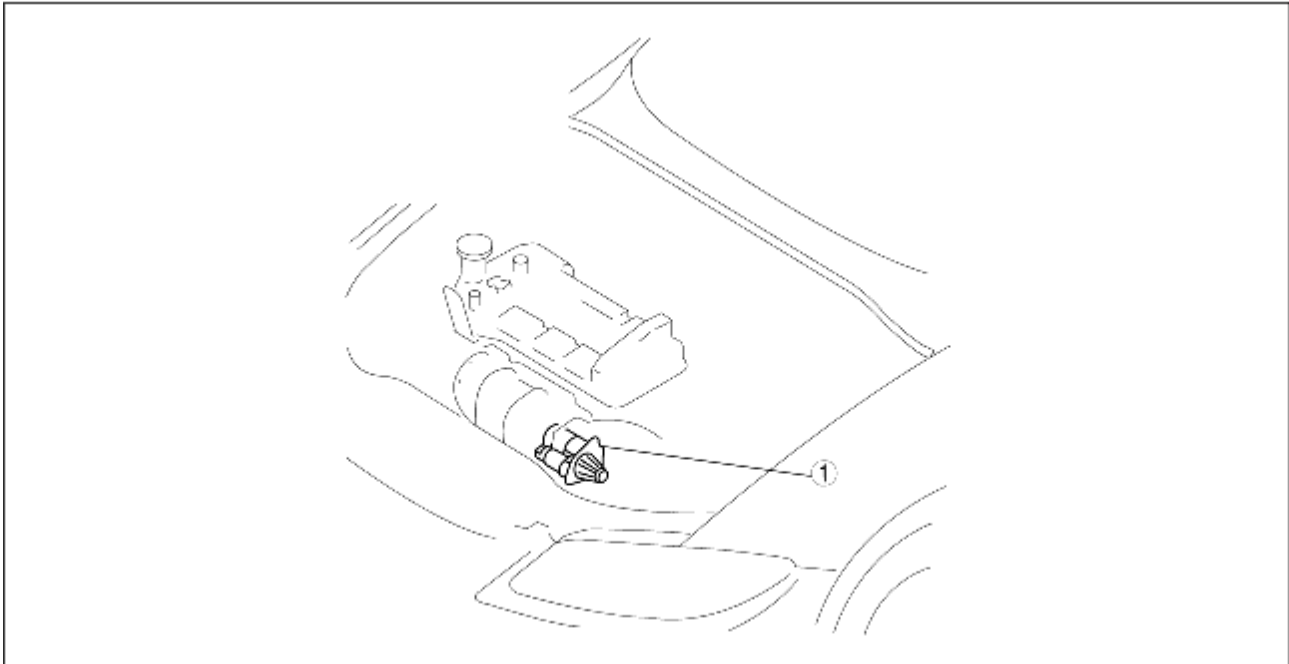

B3E01 19T001

1	Starter (See STARTER REMOVAL/INSTALLATION [ZJ, Z6].) (See STARTER INSPECTION.)
---	--