


EVAPORATIVE PURGE CONTROL BLOCK DIAGRAM [ZJ, Z6]

B3E014000140T32

- The PCM determines the engine operation conditions based on input signals and sends an operation signal to the purge solenoid valve.

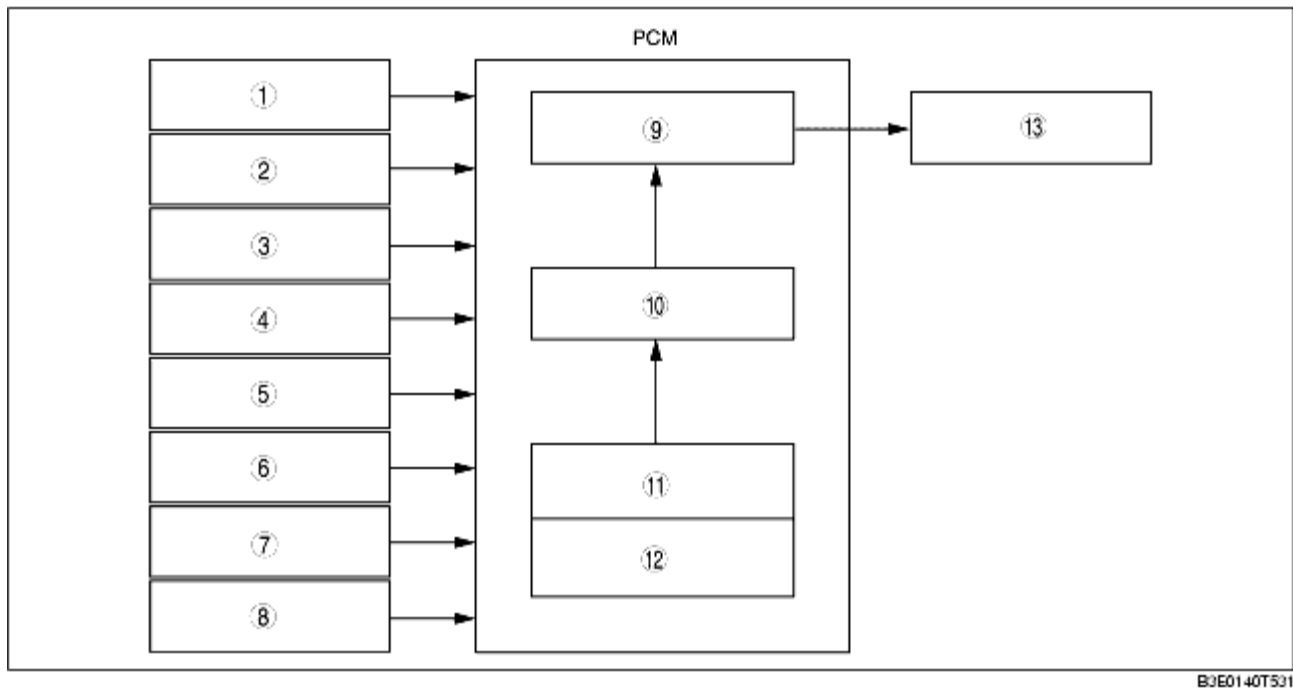

1	ECT sensor
2	IAT sensor
3	CKP sensor
4	TP sensor
5	MAF sensor
6	Front HO2S
7	Brake switch
8	Battery
9	Purge solenoid valve energization time
10	Purge flow amount
11	Basic purge flow amount
12	Corrections
13	Purge solenoid valve