


# MASS AIR FLOW (MAF)/INTAKE AIR TEMPERATURE (IAT) SENSOR REMOVAL/INSTALLATION [ZJ, Z6]

---

B3E014013215W02

1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
2. Disconnect the negative battery cable.
3. Perform the following procedure for easier access
  - (1) Remove the battery box. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\].](#))
4. Remove the MAF/IAT sensor.

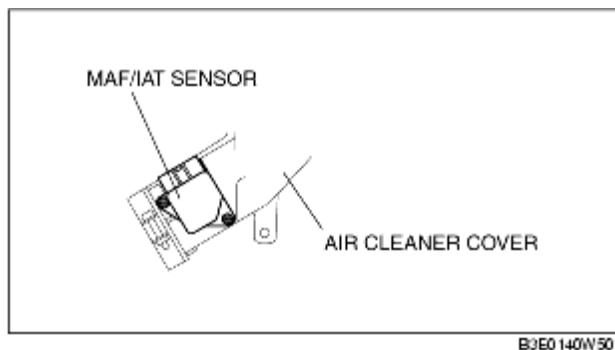

5. Install in the reverse order of removal.

**MAF/IAT sensor tightening torque**  
**0.55-0.82 N·m {5.7-8.3 kgf·cm, 4.9-7.2 in·lbf}**