


BAROMETRIC PRESSURE (BARO) SENSOR REMOVAL/INSTALLATION [LF]

B3E014018210W04

1. Remove the battery cover.
2. Disconnect the negative battery cable.
3. Remove the plug hole cover.
4. Remove the battery duct.
5. Remove in the order indicated in the table.

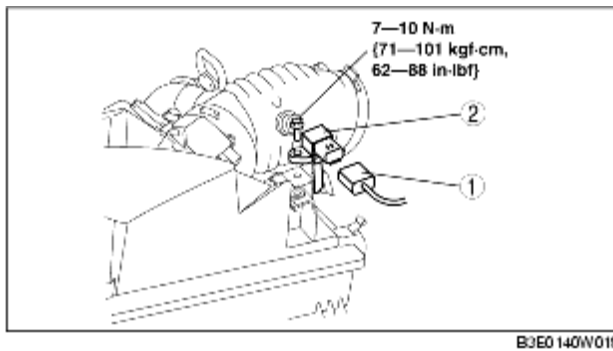

6. Install in the reverse order of removal.

1	BARO sensor connector
2	BARO sensor