


ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION [LF]

B3E014018840W07

1. Remove the battery cover.
2. Disconnect the negative battery cable.
3. Remove the plug hole cover.
4. Drain the engine coolant. (See [ENGINE COOLANT REPLACEMENT.](#))
5. Disconnect the ECT sensor connector.
6. Remove the ECT sensor using the **SST**.

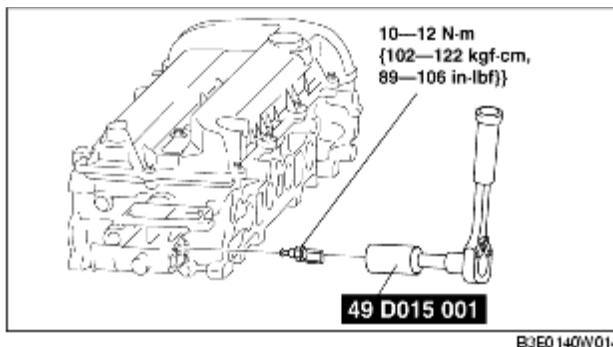

7. Install in the reverse order of removal.

Tightening torque
10-12 N·m {102-122 kgf·cm, 89-106 in·lbf}