

INTAKE AIR TEMPERATURE (IAT) SENSOR FUNCTION [LF]

B3E014018845T01

- Detects air temperature inducted in the engine.