

## REAR HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [ZJ, Z6]

---

B3E014018860W07


1. Remove the battery cover. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
2. Disconnect the negative battery cable.
3. Perform the following procedure for easier access.

### European (L.H.D.) specs.

1. Remove the air cleaner cover. (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)

### U.K. specs.

1. Set the air cleaner cover out of the way. (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
4. Install the **SST** to the rear HO2S.

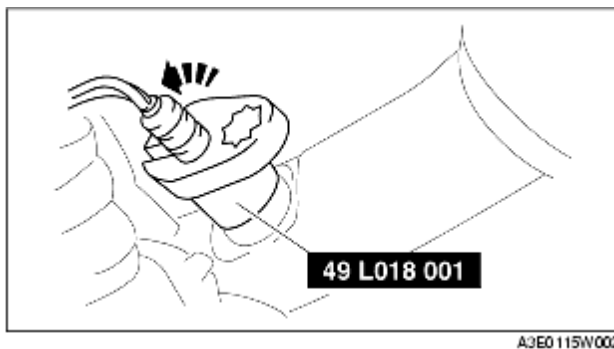

5. Remove the rear HO2S.
6. Install in the reverse order of removal.

**Front HO2S tightening torque**  
**29-49 N·m {3.0-4.9 kgf·m, 22-35 ft·lbf}**