

## PCM TEMPERATURE SENSOR FUNCTION [ZJ, Z6]

---

B3E014018880T03

- To protect the PCM, the PCM temperature sensor detects the temperature of the PCM. (See [A/C CUT-OFF CONTROL OPERATION \[ZJ, Z6\]](#).) (See [ELECTRICAL FAN CONTROL BLOCK DIAGRAM \[ZJ, Z6\]](#).)