


CONTROL SYSTEM LOCATION INDEX [ZJ, Z6]

B3E014018880W04

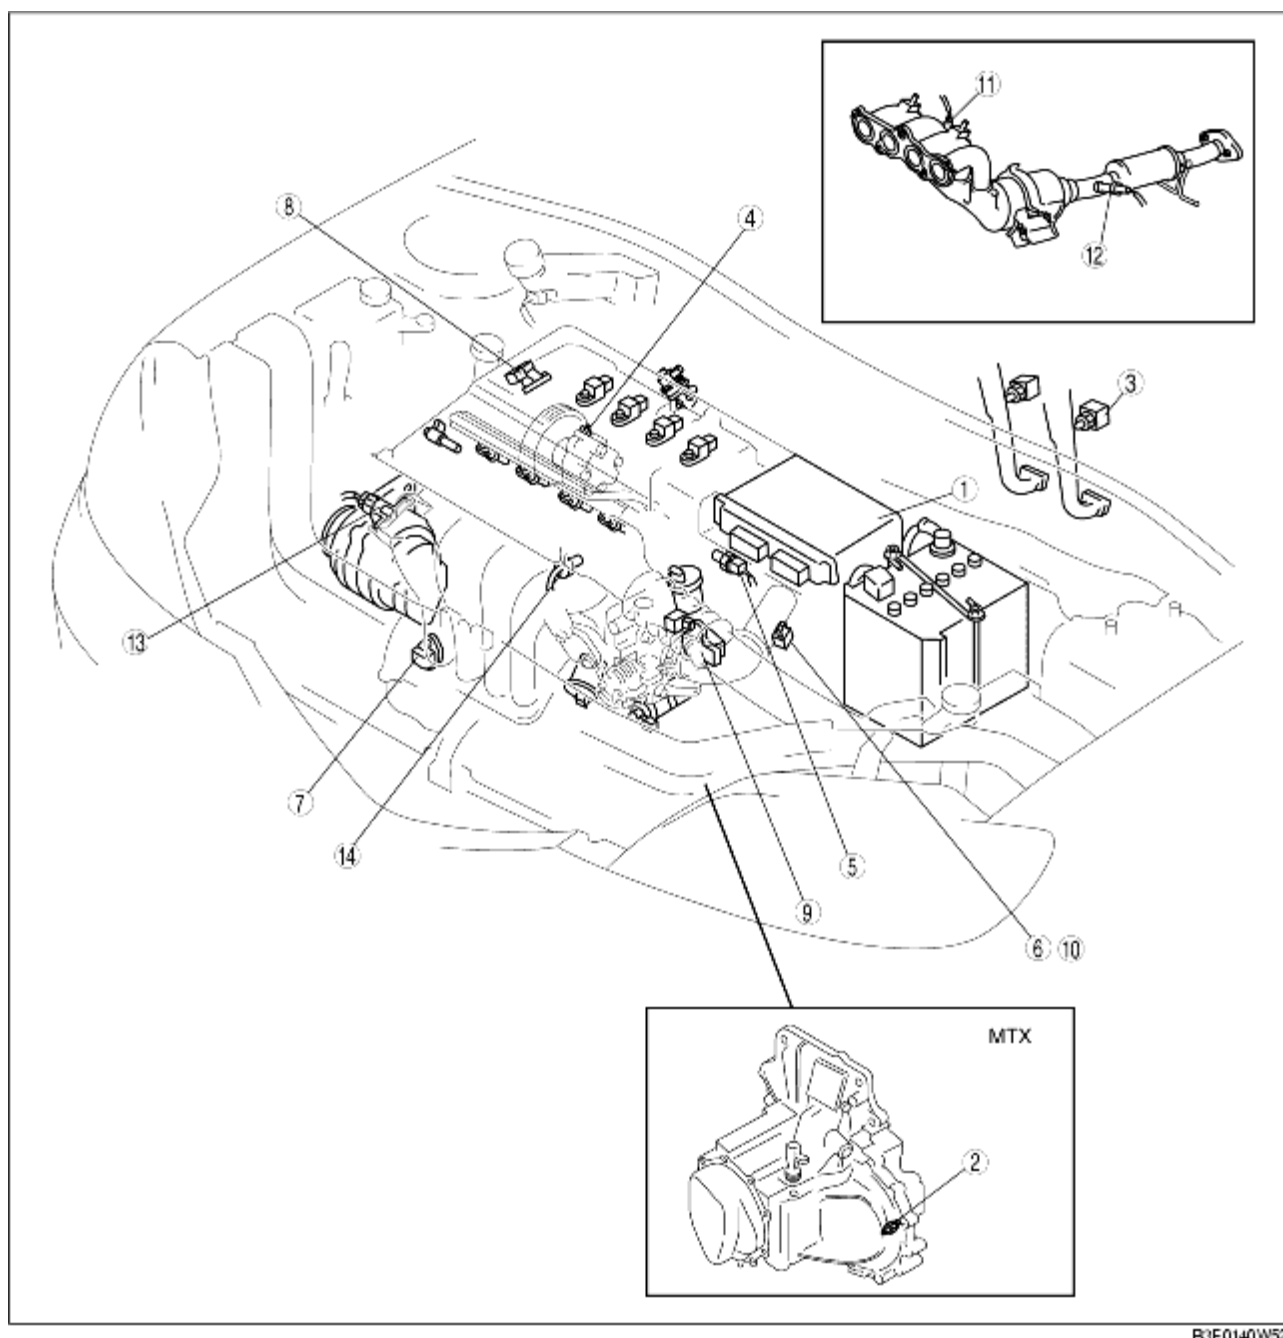

B3E0140W534

1	PCM (See PCM REMOVAL/INSTALLATION [ZJ, Z6]) (See PCM INSPECTION [ZJ, Z6]) (See PCM CONFIGURATION [ZJ, Z6])
2	Neutral switch (See NEUTRAL SWITCH INSPECTION [ZJ, Z6])
3	CPP switch (MTX)

	(See CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [ZJ, Z6])
4	PSP switch (See POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [ZJ, Z6])
5	ECT sensor (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION [ZJ, Z6]) (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION [ZJ, Z6])
6	IAT sensor (See MASS AIR FLOW (MAF)/INTAKE AIR TEMPERATURE (IAT) SENSOR REMOVAL/INSTALLATION [ZJ, Z6]) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [ZJ, Z6])
7	CKP sensor (See CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/INSTALLATION [ZJ, Z6]) (See CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [ZJ, Z6])
8	CMP sensor (See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/INSTALLATION [ZJ, Z6]) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [ZJ, Z6])
9	TP sensor (See THROTTLE POSITION (TP) SENSOR REMOVAL/INSTALLATION [ZJ, Z6]) (See THROTTLE POSITION (TP) SENSOR INSPECTION [ZJ, Z6])
10	MAF sensor (See MASS AIR FLOW (MAF)/INTAKE AIR TEMPERATURE (IAT) SENSOR REMOVAL/INSTALLATION [ZJ, Z6]) (See MASS AIR FLOW (MAF) SENSOR INSPECTION [ZJ, Z6])
11	Front HO2S (See FRONT HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [ZJ, Z6]) (See FRONT HEATED OXYGEN SENSOR (HO2S) INSPECTION [ZJ, Z6])
12	Rear HO2S (See REAR HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [ZJ, Z6]) (See REAR HEATED OXYGEN SENSOR (HO2S) INSPECTION [ZJ, Z6])
13	BARO sensor (See BAROMETRIC PRESSURE (BARO) SENSOR INSPECTION [ZJ, Z6])
14	KS (See KNOCK SENSOR (KS) REMOVAL/INSTALLATION [ZJ, Z6]) (See KNOCK SENSOR (KS) INSPECTION [ZJ, Z6])