


CONTROL SYSTEM LOCATION INDEX [LF]

B3E014018880W10

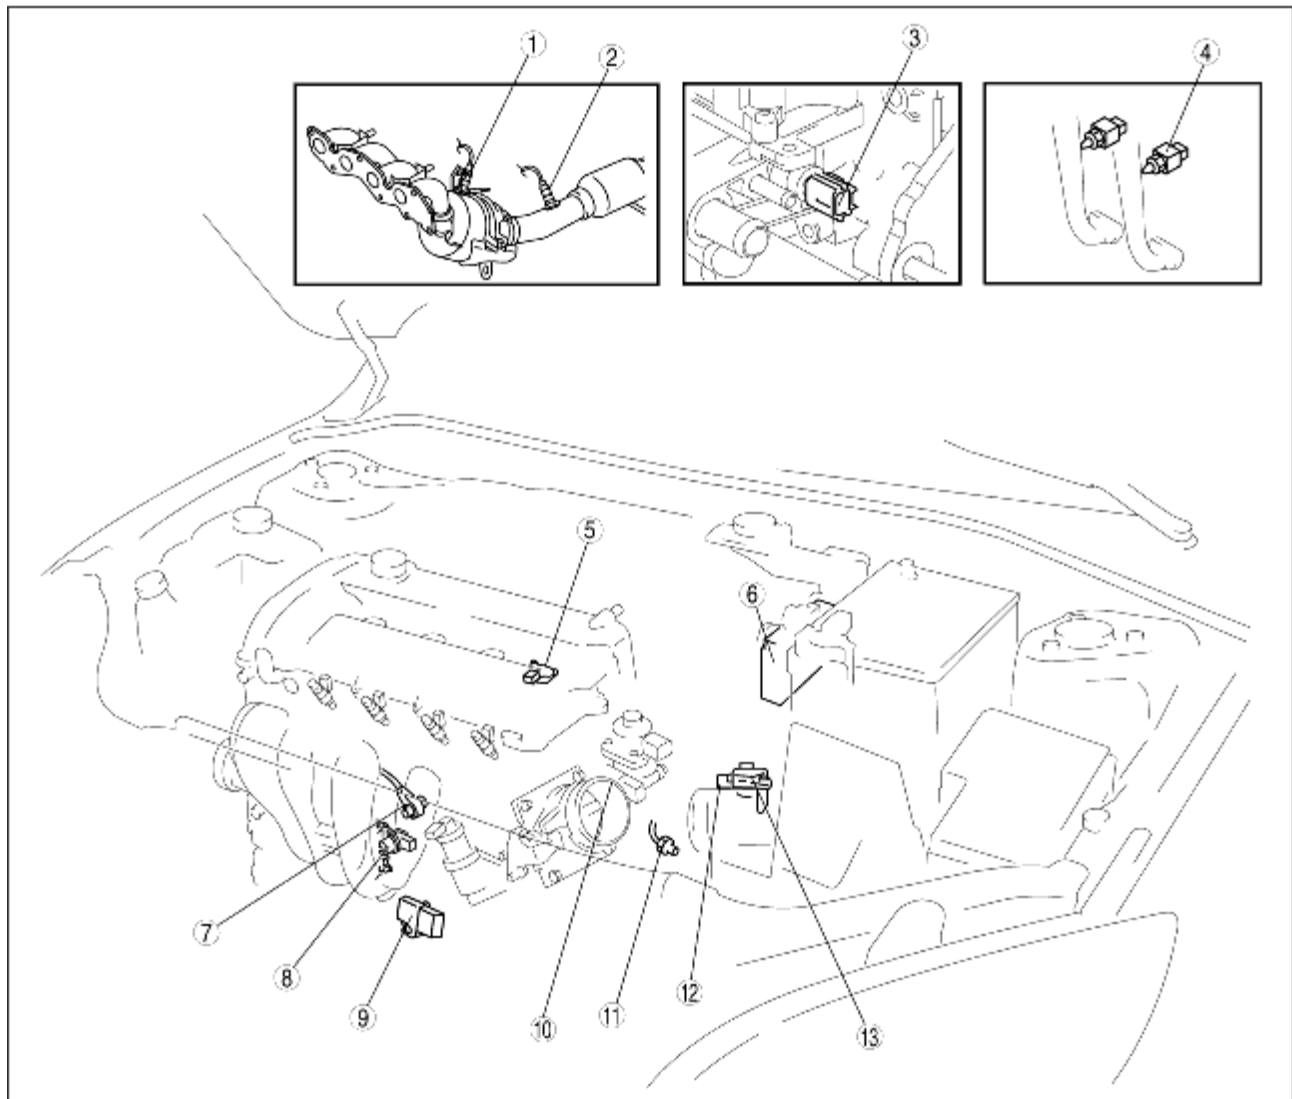

B3E0140W029

1	Front HO2S (See FRONT HEATED OXYGEN SENSOR (HO2S) INSPECTION [LF].) (See HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [LF].)
2	Rear HO2S (See REAR HEATED OXYGEN SENSOR (HO2S) INSPECTION [LF].) (See HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [LF].)
3	ECT sensor (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION [LF].) (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION [LF].)
4	CPP switch (See CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [LF].)
5	CMP sensor (See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/INSTALLATION [LF].) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [LF].)

6	PCM (See PCM REMOVAL/INSTALLATION [LF].) (See PCM INSPECTION [LF].) (See PCM CONFIGURATION [LF].)
7	KS (See KNOCK SENSOR (KS) REMOVAL/INSTALLATION [LF].) (See KNOCK SENSOR (KS) INSPECTION [LF].)
8	CKP sensor (See CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/INSTALLATION [LF].) (See CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [LF].)
9	MAP sensor (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [LF].)
10	TP sensor (See THROTTLE POSITION (TP) SENSOR INSPECTION [LF].)
11	Neutral switch (See NEUTRAL SWITCH INSPECTION [LF].)
12	BARO sensor (See BAROMETRIC PRESSURE (BARO) SENSOR INSPECTION [LF].)
13	MAF/IAT sensor (See MASS AIR FLOW (MAF) SENSOR INSPECTION [LF].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [LF].)