



ENGINE CONTROL SYSTEM WIRING DIAGRAM [LF]

B3E014018881T04

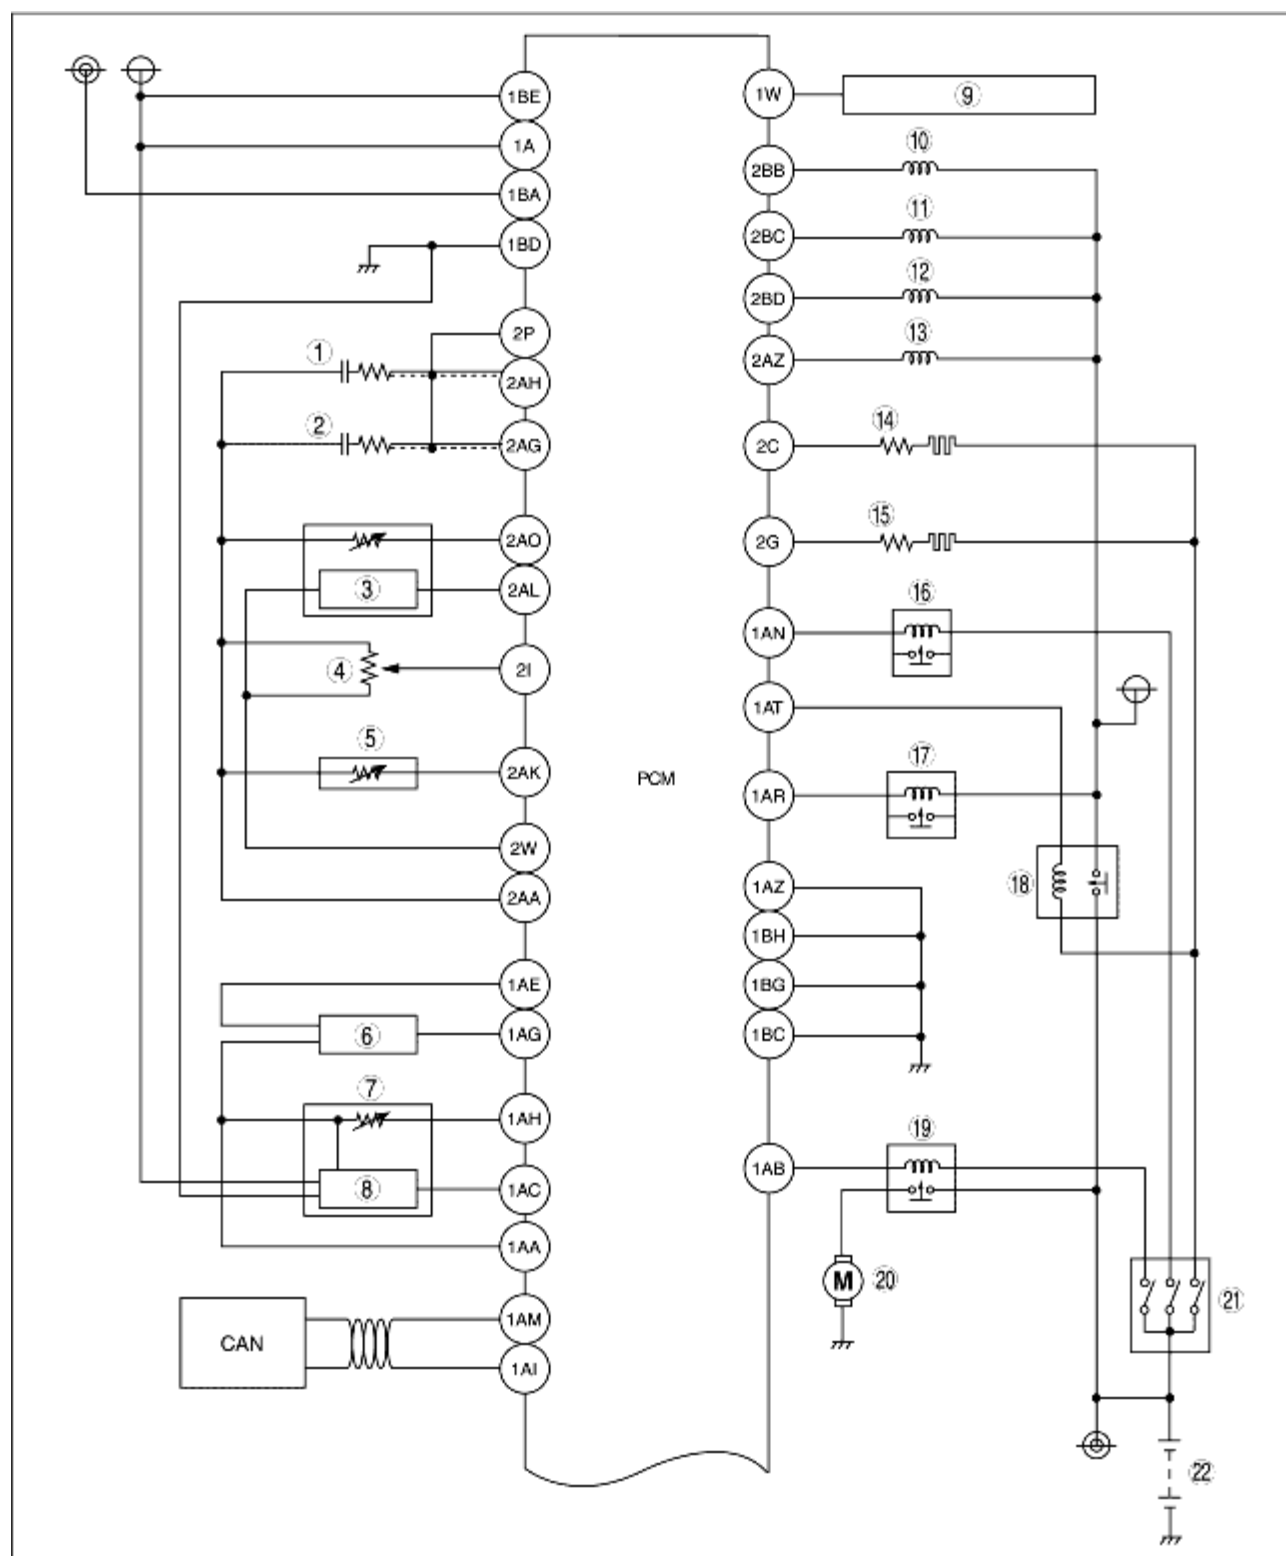

B3E0102W001

1	HO2S (rear)
2	HO2S (front)
3	MAP sensor
4	TP sensor
5	ECT sensor
6	BARO sensor
7	IAT sensor
8	MAF sensor
9	Fan control module
10	Fuel injector No.1
11	Fuel injector No.2
12	Fuel injector No.3
13	Fuel injector No.4
14	HO2S heater (rear)
15	HO2S heater (front)
16	A/C relay
17	Fuel pump relay
18	Main relay
19	Starter relay
20	Starter
21	Ignition switch
22	Battery

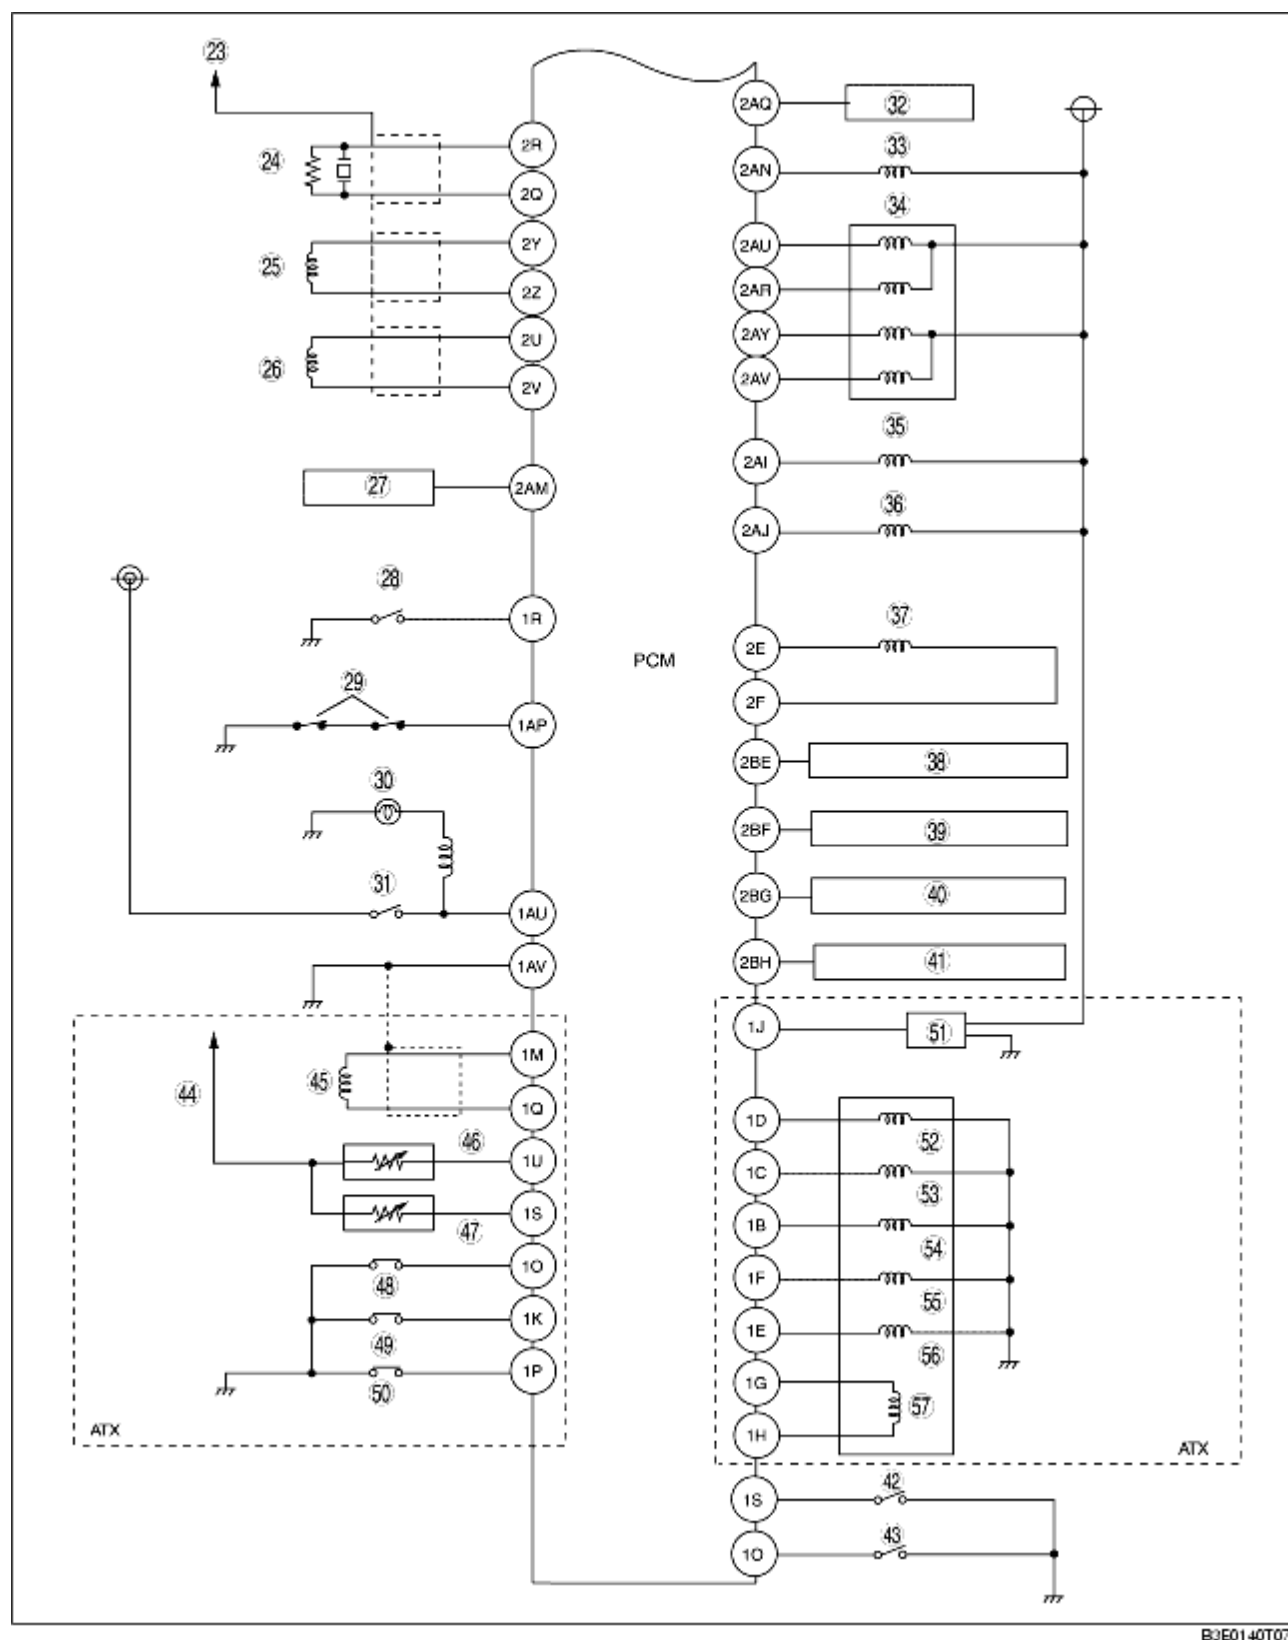

B3E0140T071

23	To terminal 2P
24	KS
25	CKP sensor
26	CMP sensor

27	Generator
28	Refrigerant pressure switch (medium)
29	Refrigerant pressure switch (high, low)
30	Brake light
31	Brake switch
32	Generator
33	Purge solenoid valve
34	EGR valve
35	Variable tumble solenoid valve
36	Variable intake-air solenoid valve
37	IAC valve
38	Ignition coil No.1
39	Ignition coil No.2
40	Ignition coil No.3
41	Ignition coil No.4
42	Neutral switch
43	CPP switch
44	To teminal 1AA
45	Input/turbine speed sensor
46	TFT sensor
47	TR switch
48	M range switch
49	Up switch
50	Doun switch
51	VSS
52	Shift solenoid C
53	Shift solenoid B
54	Shift solenoid A
55	Shift solenoid E
56	Shift solenoid D
57	Pressure control solenoid