

# VARIABLE TUMBLE CONTROL OUTLINE [LF]

---

B3E014018881T16

- At cold engine start, the following occur due to the closing of the variable tumble shutter valve for improved cold engine exhaust emission performance.
  - Improved intake airflow speed near injectors
  - Strong air tumble occurs in the combustion chamber, promoting vaporization mixture of intake air and fuel