


# FUEL INJECTION CONTROL BLOCK DIAGRAM [LF]

B3E014018881T20

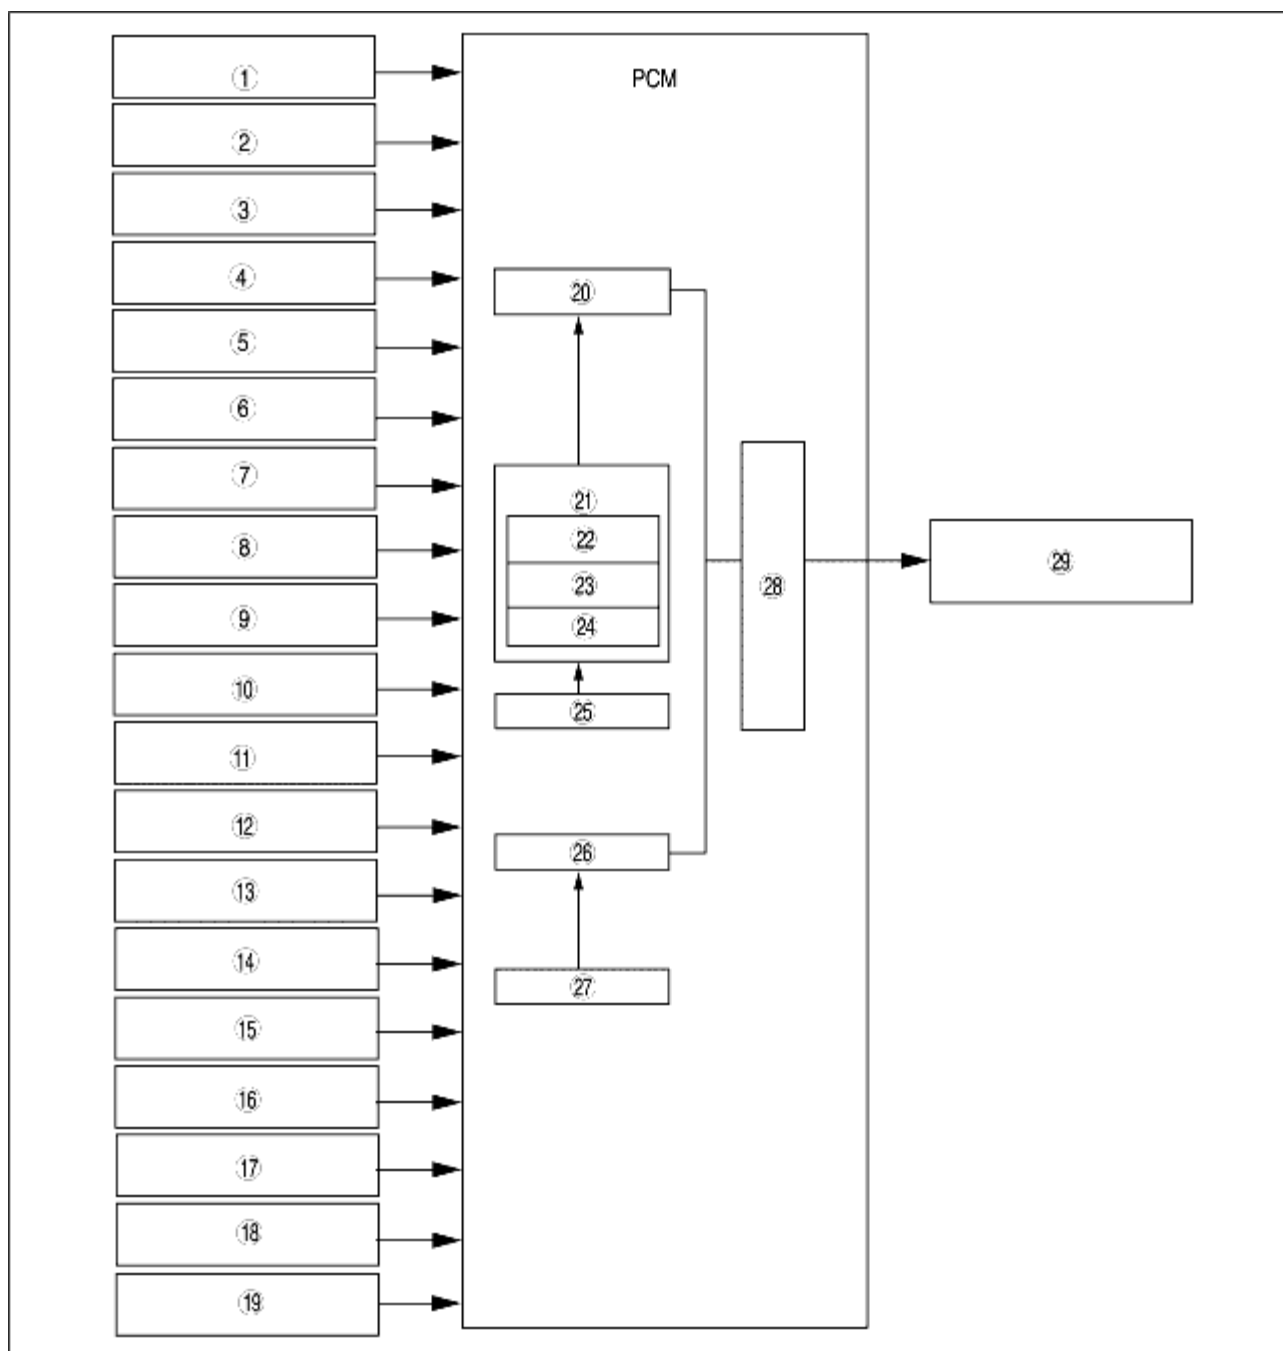

B3E0140T076

1	IAT sensor
2	MAF sensor
3	TP sensor
4	MAP sensor
5	CMP sensor

6	CKP sensor
7	ECT sensor
8	HO2S (front, rear)
9	BARO sensor
10	Neutral switch (MTX)
11	CPP switch (MTX)
12	TR switch (ATX)
13	Brake switch
14	A/C switch
15	Refrigerant pressure switch
16	Battery voltage
17	Generator terminal P
18	Vehicle speed signal (CAN)
19	Instrument cluster
20	Synchronized fuel injection
21	Effective injection time
22	Injection time at engine start
23	Basic injection time
24	Various correction types
25	Ineffective injection time
26	Non-synchronized injection control
27	Ineffective injection time
28	Fuel injector energization timing and energization time
29	Fuel injector