

FUEL PUMP CONTROL OUTLINE [LF]

B3E014018881T22

- The fuel pump is operated when the ignition switch is turned to the ON position to improve startability. As a result, fuel pressure increases rapidly and stable fuel control is performed.