


PURGE CONTROL BLOCK DIAGRAM [LF]

B3E014018881T32

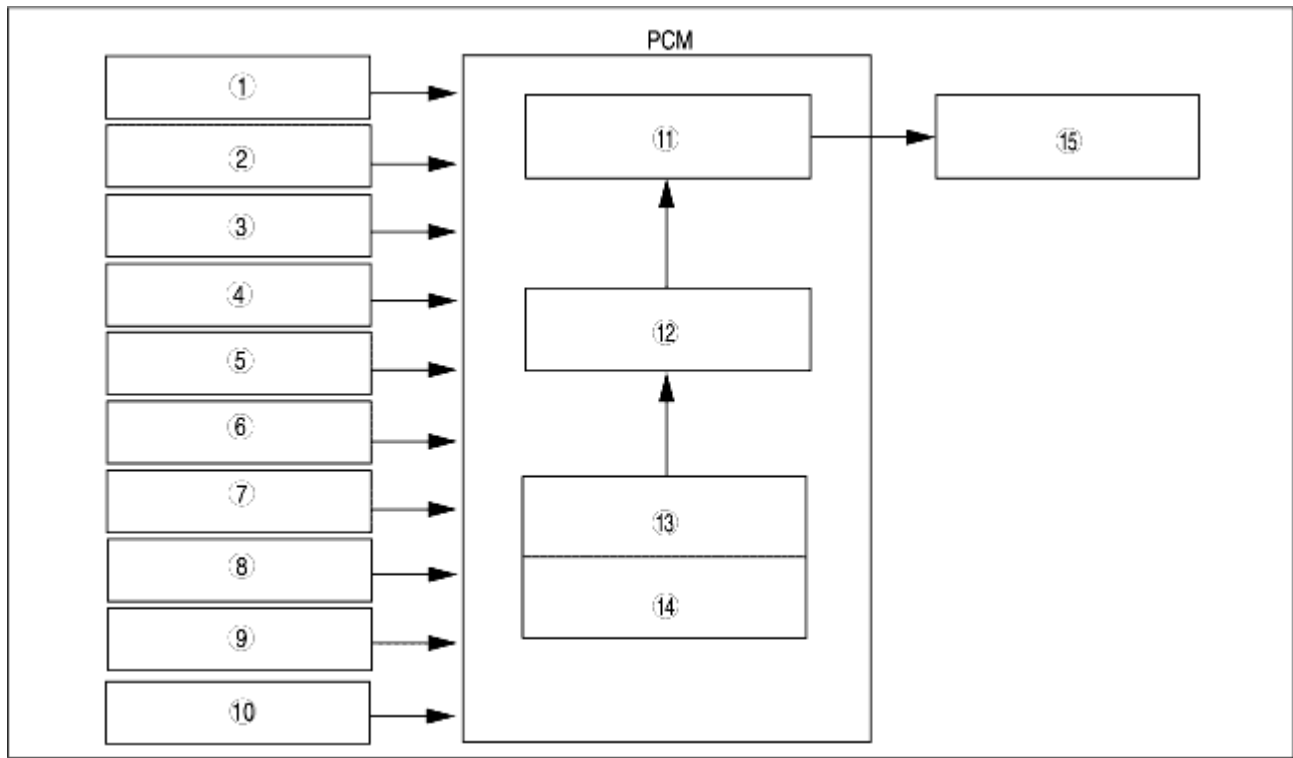

B3E0140T078

1	MAF sensor
2	IAT sensor
3	MAP sensor
4	CKP sensor
5	BARO sensor
6	Front HO2S
7	Battery voltage
8	Neutral switch (MTX)
9	CPP switch (MTX)
10	TR switch (ATX)
11	Purge solenoid valve energization time
12	Purge flow amount
13	Basic purge flow amount
14	Corrections
15	Purge solenoid valve