

## THROTTLE POSITION (TP) SENSOR FUNCTION [ZJ, Z6]

---

B3E014018910T01

- Detects the throttle valve opening angle.