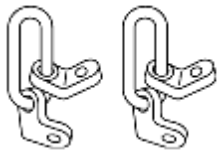


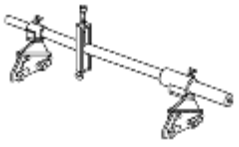
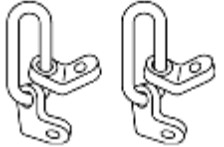


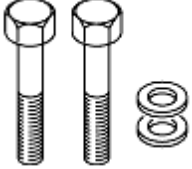
 

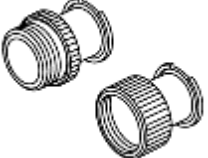
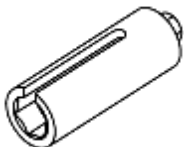

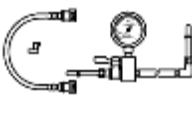
 

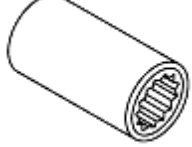

ENGINE SST [ZJ, Z6]

B3E016001001W01

1: Mazda **SST** number2: Global **SST** number

Example

1:49 UN30 3050 2:303-050 Engine lifting bracket	
---	---

49 E017 5A0 2: - Engine support set		1:49 UN30 3050 2:303-050 Engine lifting bracket		1:49 H010 401 2: - Oil seal installer	
1:49 S120 710 2: - Coupling flange holder		1:49 G011 103 2: - Bolts		1:49 E033 101 2: - Dust cover installer	
1:49 G014 001 2: - Oil filter wrench		1:49 B015 0A0 2:- Adapter set		1:49 H018 001 2: - Knock sensor wrench	
1: - 2: - WDS		1:49 N013 1A0C 2:- Fuel pressure gauge set		1:49 0187 280A 2: - Oil pressure gauge	
1:49 L018 001 2: - O2 sensor wrench		1:49 D015 001 2: - Box wrench		1: 49 F042 001 2: - Wrench	
1:49 L018 901 2: -		-		-	

Injector checker			
---------------------	---	--	--