


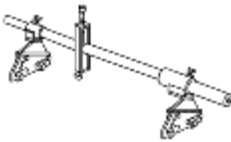
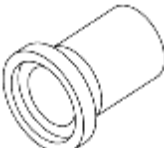
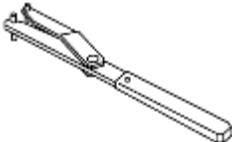

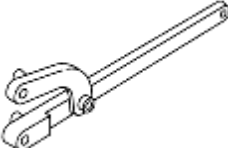
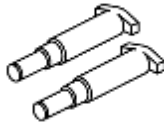
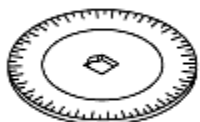


 
 

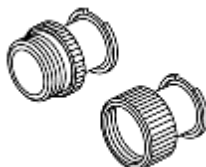
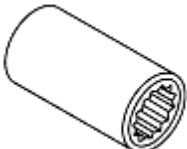

ENGINE SST [LF]



B3E016001001W02

1: Mazda **SST** number2: Global **SST** number

Example

1:49 JE01 061 2:303-507 Crankshaft TDC setting pin	
--	---

49 E017 5A0 2: - Engine support set		1:49 H010 401 2: - Oil seal installer		1:49 G032 354 2: - Adjusting wrench	
1:49 JE01 061 2:303-507 Crankshaft TDC setting pin		1:49 UN20 5072 2:205-072 Holder		1:49 B011 105 2: - Adapter	
1:49 D032 316 2: - Protractor		1:49 JE01 054 2: - Camshaft Alignment Timing Tool (Europe)		1:49 UN30 3376 2: 303-376 Camshaft Alignment Timing Tool (Except Europe)	
1:49 0187 280A 2: - Oil pressure gauge		1:49 E019 001 2: - Adapter		1: - 2: - WDS	
1:49 B015 0A0 2:- Adapter set		1:49 D015 001 2: - Box wrench		1: 49 F042 001 2: - Wrench	
1:49 N013 1A0C		1:49 L018 001			

2:- Fuel pressure gauge set		2: - O2 sensor wrench		-
--------------------------------------	---	-----------------------------	---	---