


## FRONT LOWER ARM INSPECTION

---

B3E021334300W02

1. Remove the lower arm from the vehicle.
2. Inspect the arm for bending or damage, and the ball joint for excessive looseness.
  - If there is any malfunction, replace the lower arm.
3. Rotate the ball joint stud **5 times**. Install the **SST** to the ball joint stud, measure the rotational torque using a pull scale.

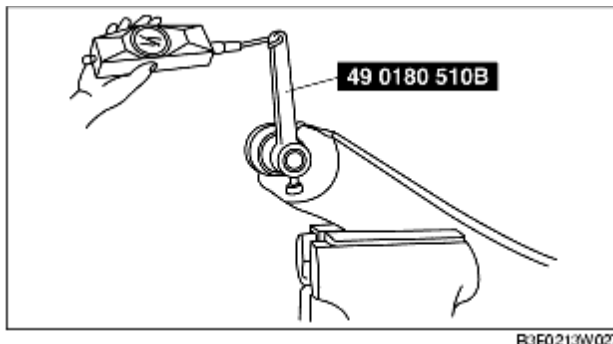

- If not within the specification, replace the lower arm.

**Rotational torque****1.0-4.9 N·m {11-49 kgf·cm, 9-43 in·lbf}****Pull scale reading [10-49 N {1.1-4.9 kgf, 3-10 lbf}]**