


REAR SUSPENSION LOCATION INDEX

B3E021401016W01

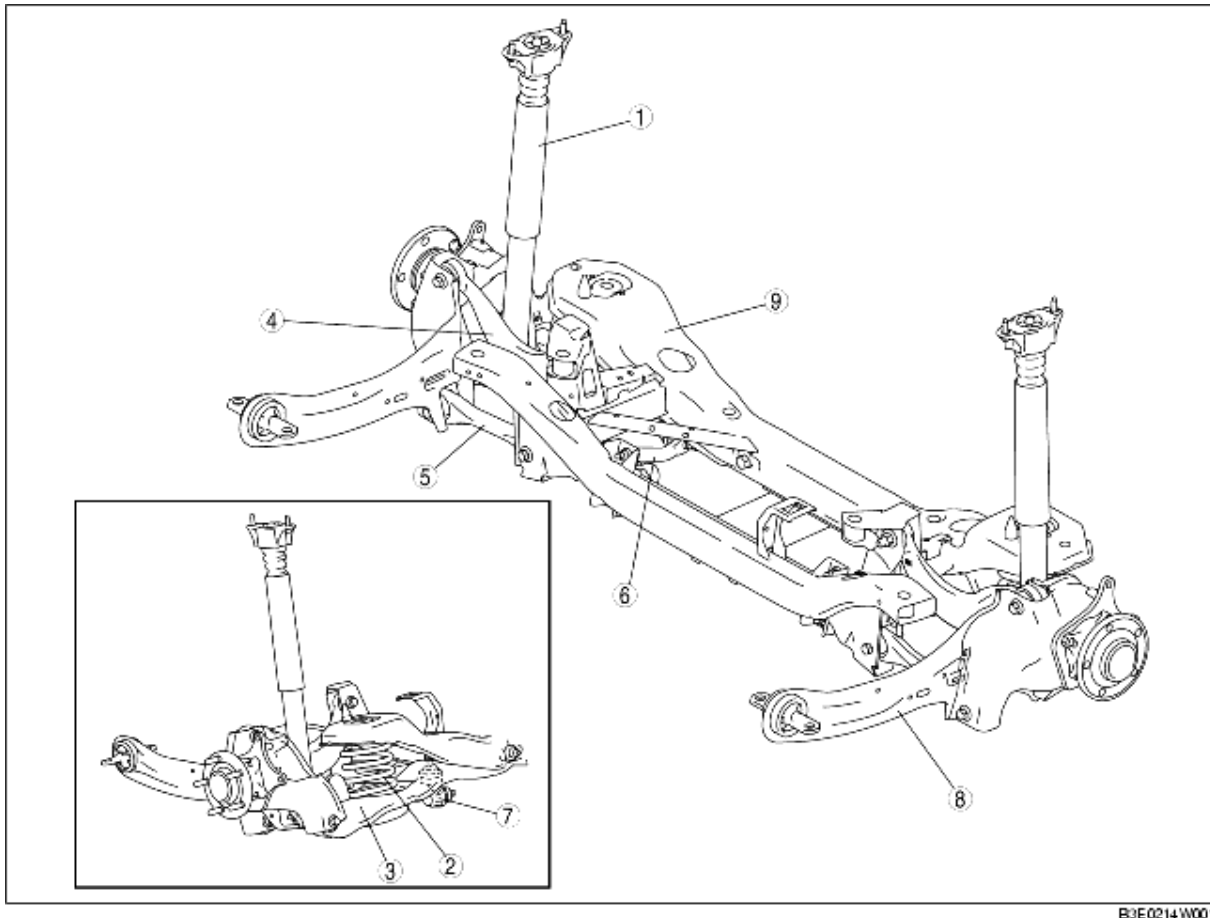

B3E0214W001

1	Rear shock absorber (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION.) (See REAR SHOCK ABSORBER INSPECTION.) (See REAR SHOCK ABSORBER DISPOSAL.)
2	Rear coil spring (See REAR COIL SPRING REMOVAL/INSTALLATION.)
3	Rear lower arm (See REAR LOWER ARM REMOVAL/INSTALLATION.)
4	Rear upper arm (See REAR UPPER ARM REMOVAL/INSTALLATION.)
5	Rear lateral link (See REAR LATERAL LINK REMOVAL/INSTALLATION.)
6	Rear stabilizer (See REAR STABILIZER REMOVAL/INSTALLATION.)
7	Stabilizer control link (See STABILIZER CONTROL LINK INSPECTION.)
8	Rear trailing link (See REAR TRAILING LINK REMOVAL/INSTALLATION.)
9	Rear crossmember (See REAR CROSSMEMBER REMOVAL/INSTALLATION.)