


REAR STABILIZER REMOVAL/INSTALLATION

B3E021428100W01

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

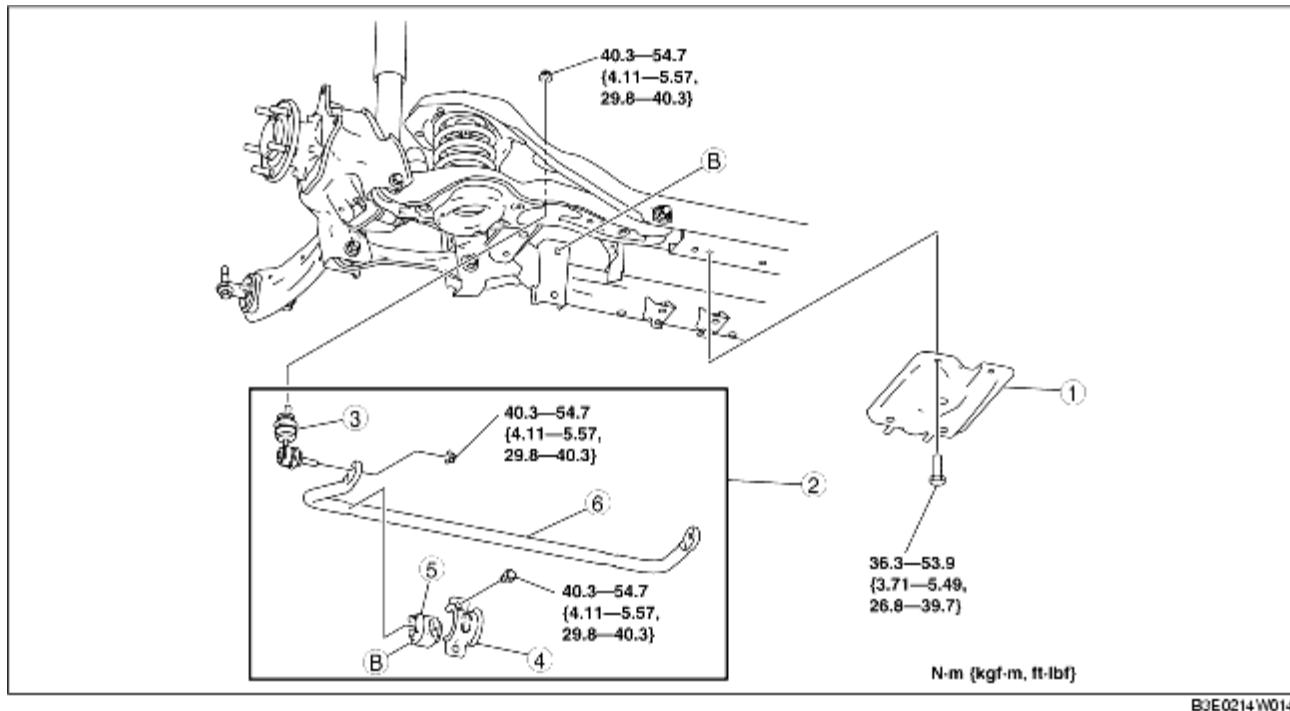

B3E0214W014

1	Rear crossmember bracket
2	Rear stabilizer component (See Rear Stabilizer Component Installation Note.)
3	Stabilizer control link
4	Stabilizer bracket (See Stabilizer Bracket Removal Note.) (See Stabilizer Bracket Installation Note.)
5	Stabilizer bushing (See Stabilizer Bushing Installation Note.)
6	Rear stabilizer


Stabilizer Bracket Removal Note

1. Secure the stabilizer bracket flange using a vise.


2. Remove the stabilizer bracket.

Stabilizer Bushing Installation Note

1. Place the stabilizer bushing so that the projection is facing toward the left side of the vehicle.

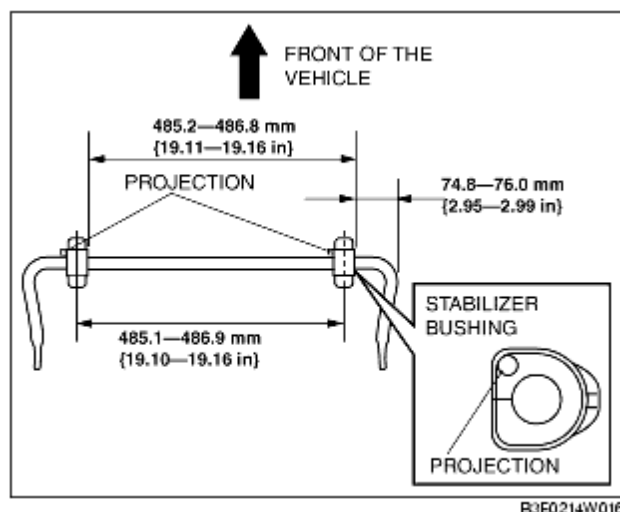

2. Widen the stabilizer bushing opening **16-26 mm {0.7-1.0 in}** and install the bushing to the rear stabilizer as shown in the figure.

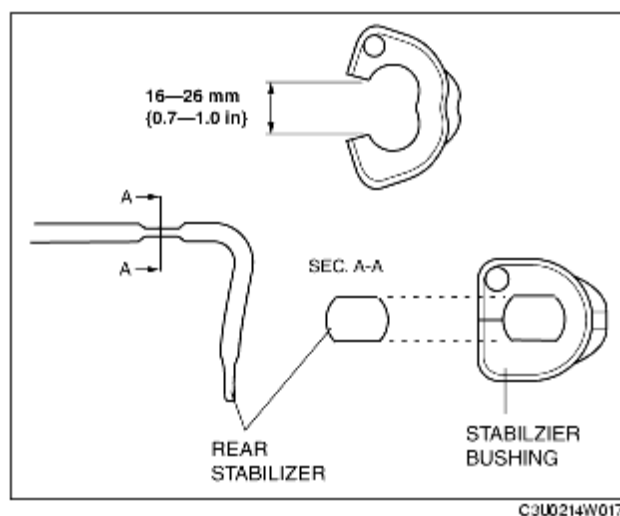


Stabilizer Bracket Installation Note

1. Apply grease to the stabilizer bushing.
2. Install the stabilizer bracket using a vise.

Rear Stabilizer Component Installation Note

1. Tighten the bolts in order indicated in the figure.

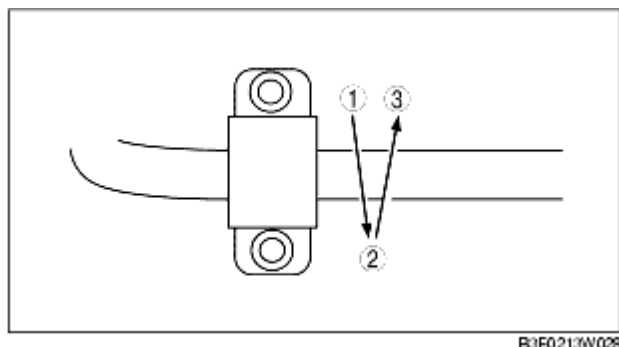

B3E0213W028