


REAR LOWER ARM REMOVAL/INSTALLATION

B3E021428310W01

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.
3. Inspect the wheel alignment and adjust it if necessary.

(See [REAR WHEEL ALIGNMENT](#).)

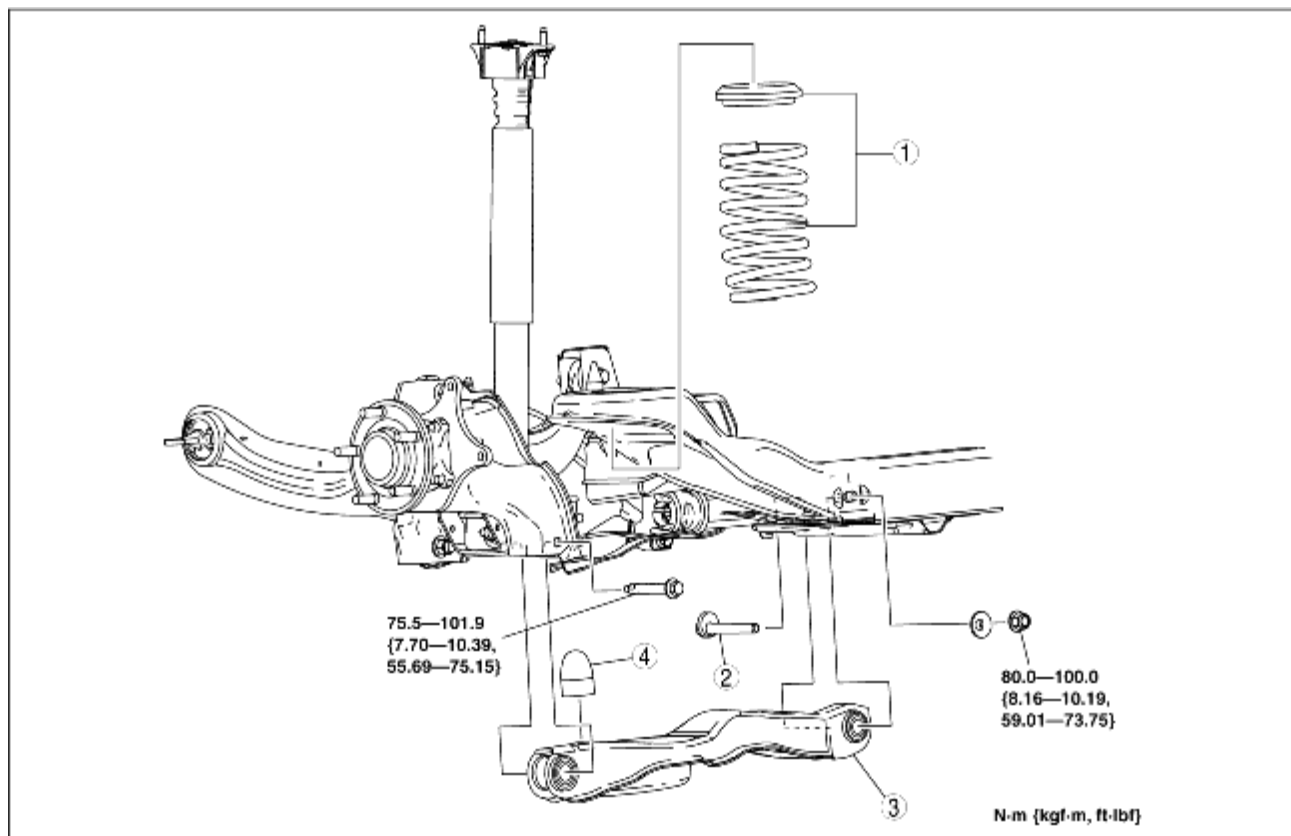

B3E0214W007

1	Rear coil spring component (See REAR COIL SPRING REMOVAL/INSTALLATION .)
2	Rear lower arm inner bolt
3	Rear lower arm
4	Bound stopper