

GENERAL PROCEDURES (FRONT AND REAR AXLES)

B3E031001018W01

Wheel and Tire Installation

1. When installing the wheels and tires, tighten the wheel nuts in a criss-cross pattern to the following tightening torque.

Tightening torque

88.2-117.6 N·m {9.00-11.99 kgf·m, 65.06-86.73 ft·lbf}

Connector Disconnection

1. Disconnect the negative battery cable before performing any work that requires handling of connectors. (See [BATTERY REMOVAL/INSTALLATION \[ZJ, Z6\]](#).) (See [BATTERY REMOVAL/INSTALLATION \[LF\]](#).)

Suspension Links Removal/Installation

1. For the joint sections with rubber bushings, raise the vehicle using a lift, and then temporarily tighten the installation bolts and nuts. Lower the vehicle to the ground and tighten them completely with the specified torque.