


WHEEL HUB, STEERING KNUCKLE INSPECTION

B3E031104060W01

Wheel Bearing Excessive Play Inspection

1. Install the magnetic base and dial gauge as shown in the figure and measure the wheel bearing axial excessive play.

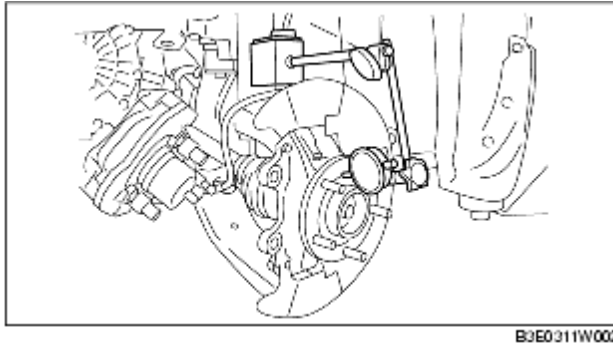

- If it exceeds the maximum specification, replace the wheel hub bearing.

Maximum wheel bearing play
0.05 mm {0.002 in}