


WHEEL HUB COMPONENT INSPECTION

B3E031205060W01

Wheel Bearing Excessive Play Inspection

1. Install the magnetic base and dial gauge as shown in the figure and measure the wheel bearing axial excessive play.

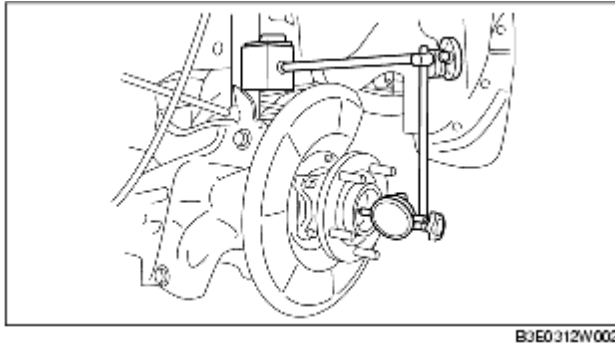

- If it exceeds the maximum specification, replace the wheel hub component.

Maximum wheel bearing play
0.05 mm {0.002 in}